


Troubleshooting

SYMPTOM	SOLUTION
Red light on B/O Engine blinks	Replace batteries.
Engine drives slowly	The wheels on the engine or attached cars may be dirty. Wipe them with a clean cloth.
Engine does not respond to the remote controller	Battery power in the remote controller may be weak. Replace all three batteries in the remote controller with fresh, alkaline batteries. You may be beyond the maximum range of the remote controller which is about 12 feet. You may not have a clear path between the remote controller and the engine. This toy works best when there are no obstructions between the engine and the remote controller, operate the toy by holding controller 2 feet minimum horizontally above the train. Bright sunlight or fluorescent lights may affect the range of the remote controller. Try dimming the room you are playing in. The engine may have shut off. If you do not operate the remote controller for a few minutes, the engine shuts off automatically. Re-start the engine by switching it "OFF" & "ON" again.

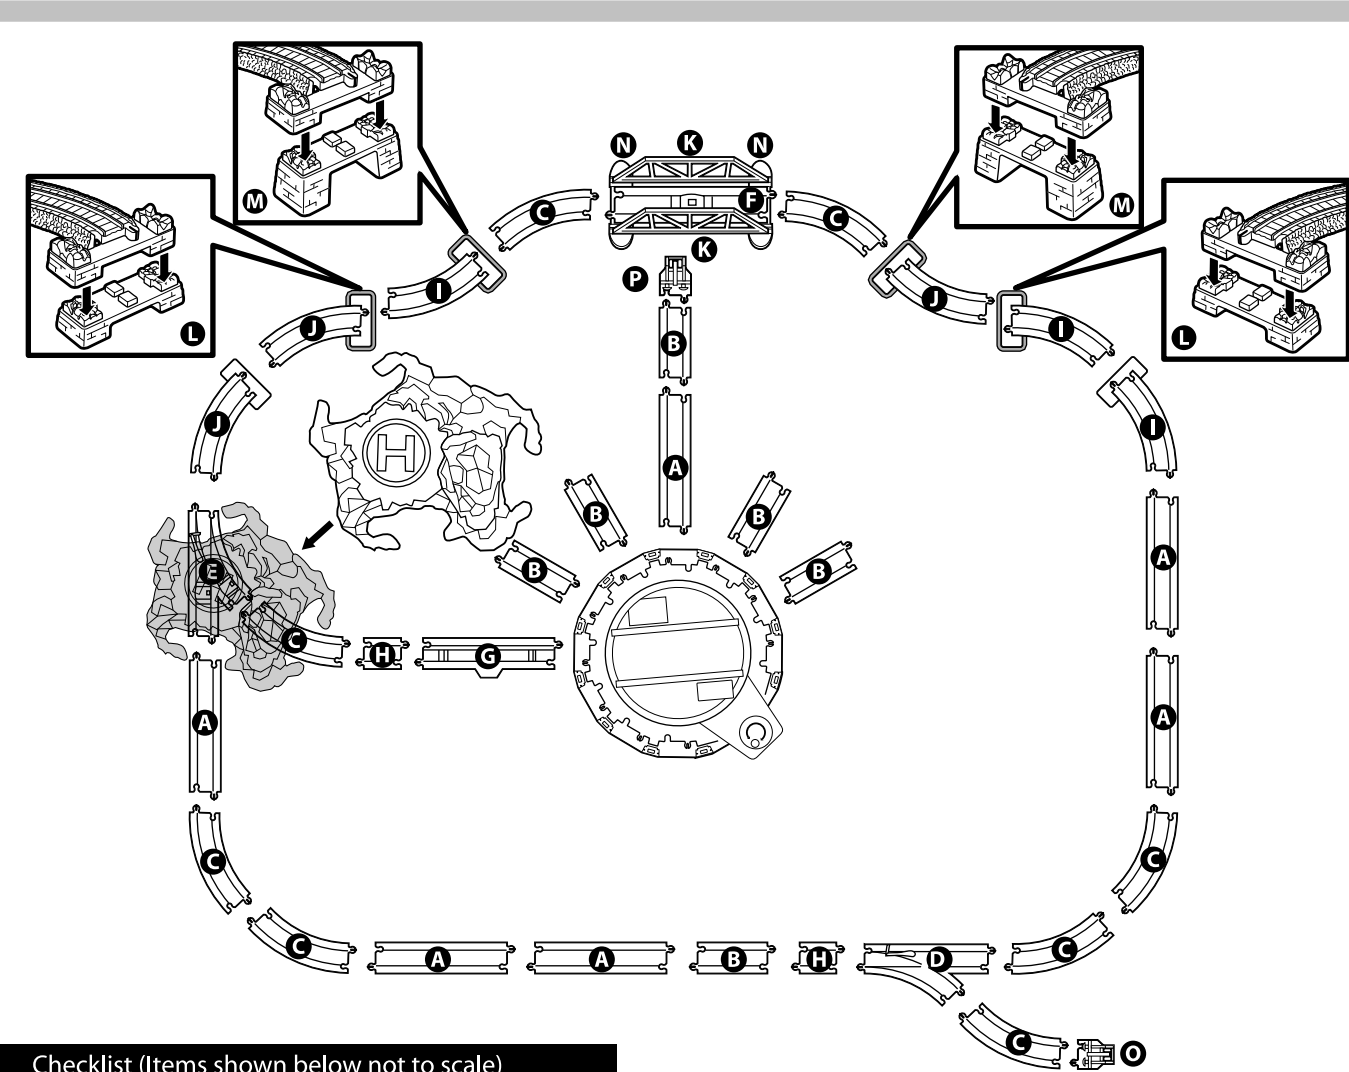

Checklist (Items shown below not to scale)					
A X 6 Straight	B X 6 Half Straight	C X 8 Curve	D X 1 Turn Out (Right)	E X 1 Face Change Turn Out (Left)	F X 1 Face Change Straight
G X 1 Stop/Go Track	H X 2 Quarter Straight	X 1 Special Connector (A)	X 1 Special Connector (B)	I X 3 Sloped Curve (Left)	J X 3 Sloped Curve (Right)
K X 1 set Bridge Set (Left & Right)	L X 2 Girder (1 level)	M X 2 Girder (2 level)	N X 2 Bridge Stand (3 level)	O X 1 Buffer	P X 1 Buffer Without Destination Sign
Harold	Remote Control	Thomas	X 1 3 Way Tunnel	Tidmouth Sheds	

